



- 1** Panel Lights & Panel Light Switch
- 2** Safety Shutdown Alarms Red
- 3** Customer Supplied Shutdown or Warning
- 4** General Shutdown Alarm (Look for the source and reset. See item 13. The fault will reset when you turn the switch to "Off/Reset". The display, item 19, will indicate a fault code).
- 5** Audible Fault Alarm (The alarm may be silenced bby operatig switch number 17.)
- 6** Power in Kw or KVA is an option you may not have. Displayed on #19.
- 7** Generator A/C Output in Volts, Amps, and Hz. Displayed on item #19.
- 8** Engine parameters in oil pressure, temp, DC voltage, etc. Toggle the button. Displayed on #20.
- 9** Alarm light test button. All should light up.
- 10** If "Fault Alarm (#5) is flashing, button #10 will cause the fault code to display on screen #19.
- 11** Takes you out of "Service Mode".
- 12** Puts you into "Service Mode". Don't press this key. If you do, press #11 to get back out.
- 13** Engine Control Switch.
A. Move to Off/Reset to clear alarms
B. Auto makes it ready to remotely start.
C. Man/Start it will start and run.
D. Cooldown/Stop shuts the machine off.
- 14** A/C voltage ouput adjust. Don't touch.
- 15** Emergency stop. Pull out to run again.
- 16** Audible alarm.
- 17** Silences audible alarm.
- 18** Pre-alarm lights. These do not prevent it running. They warn you of impending failure.
- 19** Screen display for A/C power, voltage, amps, and Hz.
- 20** Engine function display.