



- 1 A/C Amps
- 2 A/C Volts
- 3 Audible Alarm
- 4 A/C Hertz (Frequency)
- 5 Volt/Amp Selector switch. Do not touch. This has no control over any generator function. It just lets you read values. However, these are delicate. After years in service, they tend to fail when you operate them.
- 6 Voltage output adjust. Don't touch
- 7 Automotive type 15-amp fuse.
- 8 Emergency stop. Pull out to reset.
- 9 Control switch. Don't lose the damned key!
 A. In Auto position, it is ready to start from the transfer switch.
 B. In Manual position, it will start and run.
 C. In Off position, you can reset the alarms. You have to press the "Reset" button.
- 10 Display screen. See the pages I have attached.

