



1. Main Status Display.
2. Display Scroll Buttons.
3. Accept Button.
4. Select Stop Mode.
5. Select Manual Mode.
6. Select Test Mode (7120 only).
7. Select Auto Mode.
8. Alarm Mute/ Lamp Test.
9. Start Engine.
10. Configurable Alarm Indicators.
11. Transfer to Generator Button.
12. Transfer to Main Button (7120). Open Generator Button (7110).
13. Main on Load (DSE7120 only).
14. Generator Available.

How to operate a similar Deep Sea Controller